


# Lever Hoist Parts Breakdown

 
#	Description	#	Description	#	Description	#	Description	#	Description
1	Gear assembly	14	Snap ring	27	Hand wheel	40	Castle nut	53	6t top hook frame
2	Disk gear assy.	15	Disk hub	28	Load chain	41	Split pin	54	Move wheel pin
3	Drive shaft	16	Free spring	29	Chain ring	42	Lock nut	55	Move wheel
4	Splined gear	17	Friction disk	30	Name plate	43	Wire snap ring	56	6t bottom hook frame
5	Gear side plate assy.	18	Ratchet disk	31	Top hook assy.	44	Screw	57	Nut
6	Load sheave	19	Female thread grip	32	Top hook shaft	45	Lock washer	58	Screw
7	Guide plate	20	Brake cover assy.	33	Bottom hook assy.	46	Rivet	59	Nut
8	Roller	21	Change over gear	34	Chain pin	47	Snap ring	60	Screw
9	Bearing race	22	Lever handle assy.	35	Hex nut	48	6t hook	61	Safe clip assembly
10	Stripper	23	Change over pawl	36	Lock washer	49	Nut		
11	Lever side plate assy.	24	Spring seat	37	Hex nut	50	Screw		
12	Pawl spring	25	Change over spring	38	Lock washer	51	6t pin		
13	Pawl	26	Bushing	39	Screw	52	Nut		

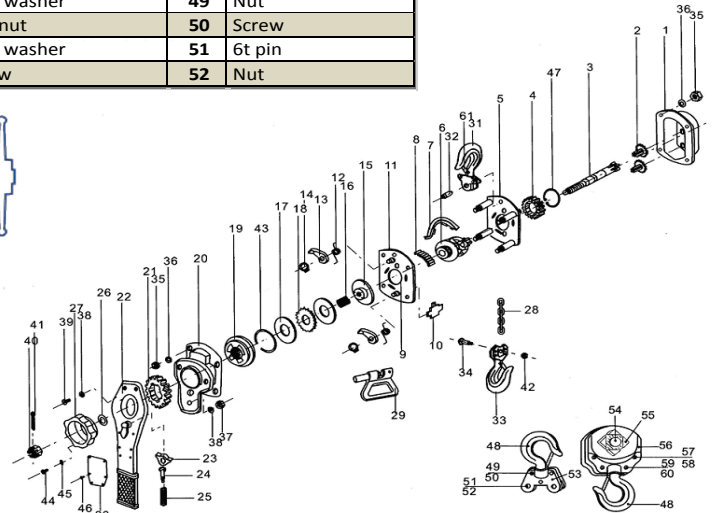

## Available Spare parts for Lever Puller 622

#	Description	¼ tonne	1-1/2 tonne	3 tonne	6 tonne
6	Load sheave	6-0.75TLBLS	6-1.5TLBLS	6-3-6TLBLS	6-3-6TLBLS
12	Pawl spring	6-0.75TLBPS	6-1.5TLBPS	6-3TLBPS	6-3TLBPS
13	Pawl	6-0.75TPAWL	6-1.5TPAWL	6-3TPAWL	6-6TPAWL
14	Snap ring	6-0.75TLBSR	6-1.5TLBSR	6-3TLBSR	6-3TLBSR
16	Free spring	6-0.75TLBFS	6-1.5TLBFS	6-3TLBFS	6-3TLBFS
17	Friction disk	6-0.75TFD	6-1.5TFD	6-3TFD	6-6TFD
19	Female thread grip	6-0.75TLBFTG	6-1.5TLBFTG	6-3TLBFTG	6-3TLBFTG
20	Brake cover assembly	6-0.75TLBBCA	6-1.5TLBBCA	6-3TLBBCA	6-3TLBBCA
23	Change over pawl	6-0.75TLBCOP	6-1.5TLBCOP	6-3TLBCOP	6-3TLBCOP
24	Spring seat	6-0.75TLBSS	6-1.5TLBSS	6-3TLBSS	6-3TLBSS
25	Change over spring	6-0.75TLBCOS	6-1.5TLBCOS	6-3TLBCOS	6-3TLBCOS
26	Bushing	6-0.75TLBB	6-1.5TLBB	6-3TLBB	6-3TLBB
28	Load chain	6-0.5-1TCBCH	6-1.5T-3TCBCH	6-5T-10TCBCH	6-5T-10TCBCH
29	Chain ring	6-0.75TLBCR	6-1.5TLBCR	6-3TLBCR	6-3TLBCR
30	Name plate	6-0.75TLBNP	6-1.5TLBNP	6-3TLBNP	6-3TLBNP
31	Top hook assembly	6-0.75TLBTHA	6-1.5TLBTHA	6-3TLBTHA	6-6TLBTHA
32	Top hook shaft	6-0.75TLBTHS	6-1.5TLBTHS	6-3TLBTHS	6-3TLBTHS
33	Bottom hook assembly	6-0.75TLBBHA	6-1.5TLBBHA	6-3TLBBHA	6-6TLBBHA
34	Chain pin	6-0.75TLBCP	6-1.5TLBCP	6-3TLBCP	6-3TLBCP
35	Hex nut	6-0.75TLBHN	6-1.5TLBHN	6-3TLBHN	6-3TLBHN
36	Lock washer	6-0.75TLBLW	6-1.5TLBLW	6-3TLBLW	6-3TLBLW
37	Hex nut	6-0.75TLBHNN	6-1.5TLBHNN	6-3TLBHNN	6-3TLBHNN
38	Lock washer	6-0.75TLBLW	6-1.5TLBLW	6-3TLBLW38	6-3TLBLW38
39	Screw	6-0.75TLBS	6-1.5TLBS	6-3TLBS	6-3TLBS
40	Castle nut	6-0.75TLBCN	6-1.5TLBCN	6-3TLBCN	6-3TLBCN
41	Split pin	6-0.75LBSP	6-1.5LBSP	6-3TLBSP	6-3TLBSP
42	Lock nut	6-0.75TLBLN	6-1.5TLBLN	6-3TLBLN	6-3TLBLN
43	Wire snap ring	6-0.75TWSR	6-1.5TWSR	6-3TWSR	6-3TWSR
44	Screw	6-0.75TLBSS44	6-1.5TLBSS44	6-3TLBSS44	6-3TLBSS44
45	Lock washer	6-0.75TLBLW	6-1.5TLBLW	6-3TLBLW45	6-3TLBLW45
46	Rivet	6-0.75TLBR	6-1.5TLBR	6-3TLBR	6-3TLBR
47	Snap ring	6-0.75TLBSR	6-1.5TLBSR	6-3TLBSR	6-3TLBSR
61	Safe clip assembly	6-0.75TSCA	6-1.5TSCA	6-3TSCA	6-6TSCA

**READ WARNING AND APPLICATION INFORMATION BEFORE USING**



**Industrial Rigging & Supply**